# GB AWT 2274/3

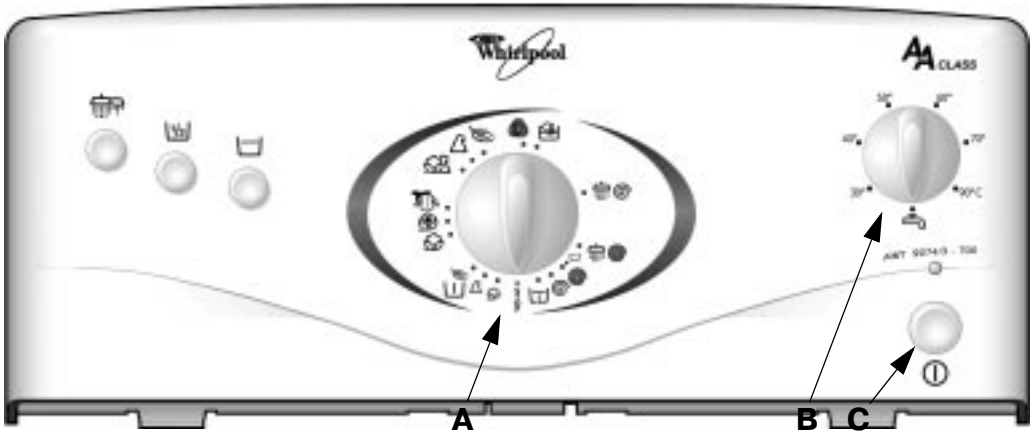


**A. Programme Selection Knob**
**B. Temperature Selection Knob**
**C. "On/Off" Button**

**Cold**

❇ : option / Yes: dosing required

1) Do not use liquid detergents.

2) For improved garment care spin speed is null in this programme.

| Programme | Care Labels | Type of wash / Notes | Max. load kg | Detergents and additives: Prewash | Main Wash | Softener | Bleach | Special Options: Intensive Rinse | Half Load | Rinse Hold | Tempera-ture °C | Max. Spin Speed rpm |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Cotton with prewash | 95 | Heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. | 5.0 | Yes 1) | Yes | ❇ | ❇ | ❇ | ❇ | ❇ | Max. 90 | 700 |
| Synthetic with prewash | | Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. | 2.0 | Yes 1) | Yes | ❇ | — | ❇ | ❇ | ❇ | Max. 60 | 700 |
| Delicate with prewash | | Heavily soiled curtains and delicate clothing, dresses, skirts, shirts and blouses. | 1.5 | Yes 1) | Yes | ❇ | — | — | — | ❇ | Max. 40 | 700 |
| Cotton | 95 | Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. | 5.0 | — | Yes | ❇ | ❇ | ❇ | ❇ | ❇ | Max. 90 | 700 |
| Coloured Cotton | | Normally soiled bed linen, table linen and underwear, towels, shirts etc., made of cotton and linen. | 3.0 | — | Yes | ❇ | — | ❇ | ❇ | ❇ | Max. 60 | 700 |
| Daily Mixed | 40 | Slightly to normally soiled textiles made of cotton and/or synthetics. | 3.0 | — | Yes | ❇ | — | ❇ | — | ❇ | Max. 60 | 700 |
| Mixed cotton/ Synthetic | | Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. | 2.0 | — | Yes | ❇ | — | ❇ | ❇ | ❇ | Max. 60 | 700 |
| Synthetic | | Normally soiled overalls and sportswear made of cotton, polyester, polyamide and blends with cotton. | 1.5 | — | Yes | ❇ | — | ❇ | ❇ | ❇ | Max. 60 | 700 |
| Delicate | | Curtains and delicate clothing, dresses, skirts, shirts and blouses. | 1.5 | — | Yes | ❇ | — | — | — | ❇ | Max. 40 | 700 |
| Wool | | Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. *If you select "Rinse Hold" do not leave items to soak for too long.* | 1.0 | — | Yes | ❇ | — | — | — | ❇ | Max. 40 | 700 |
| Handwash | | Textiles made of silk, linen, wool and viscose marked as "handwashable". *If you select "Rinse Hold" do not leave items to soak for too long.* | 1.0 | — | Yes | ❇ | — | — | — | ❇ | Max. 30 | — 2) |
| Rinse + Gentle Spin | | *Programme for treating delicate laundry with starch or softener.* | 2.0 | — | — | ❇ | — | — | — | ❇ | — | 700 |
| Rinse + Spin | | *Programme for treating cotton or linen laundry with starch or softener.* | 5.0 | — | — | ❇ | — | — | — | ❇ | — | 700 |
| Spin | | *Programme to spin cotton or linen laundry intensively with maximum spin speed.* | 5.0 | — | — | — | — | — | — | — | — | 700 |
| Gentle spin | | *Programme to spin delicate laundry gently with a restricted spin speed.* | 2.0 | — | — | — | — | — | — | — | — | 700 |
| Drain | | *Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".* | — | — | — | — | — | — | — | — | — | — |

**N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.**

Whirlpool is a registered trademark of Whirlpool USA

**5019 312 10141**

## CONSUMPTION DATA

| Programme | Temperature Selector (°C) | Load (kg) | Water (l) | Energy (kWh) | Approx. Programme Duration (hours : minutes) |
|---|---|---|---|---|---|
| Cotton | 90 | 5.0 | 63* | 1.80 | 2:05 |
| Cotton | 60 | 5.0 | 59 | 0.95 | 2:05 |
| Cotton | 40 | 5.0 | 59 | 0.60 | 2:05 |
| Daily Mixed | 40 | 3.0 | 45 | 0.48 | 1:00 |
| Synthetic | 60 | 2.0 | 62 | 0.80 | 1:35 |
| Synthetic | 40 | 2.0 | 56 | 0.45 | 1:30 |
| Delicate | 40 | 1.5 | 63 | 0.45 | 0:50 |
| Wool | 40 | 1.0 | 63 | 0.45 | 0:40 |
| Handwash | 30 | 1.0 | 63 | 0.30 | 0:50 |

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.
**The data on the "Energy Label" refer to the programme "Cotton 60°C".**

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

## PREPARATION OF WASH CYCLE

1. Load the machine, close the drum doors and check that they are properly locked.
2. Add detergents and additives into the dispenser to no more then the **"MAX"** level mark, as follows:
   - Programme with pre and main wash
   - Main wash programme without prewash
   - Fabric softeners and conditioners
   - Chlorine bleach
   - Stain remover agents
   - Anti-scale agents (if necessary)
3. Turn the **programme selector knob** to the desired programme.
4. Turn the **temperature selector knob** to the desired temperature.

## SELECT THE DESIRED OPTION

**Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet.**

**"Intensive Rinse" button**

- One rinse cycle is added to ensure a more intensive rinse.
- This option is particularly suitable for areas with very soft water, washing baby linen and people with detergents allergies.

**"Half Load" button**

- Can be used for small loads and lightly soiled laundry.
- Reduces the water consumption especially during the rinses.

**"Rinse Hold" button**

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from fading.
- This option is particularly recommended for the "Synthetic", "Delicate" and "Daily Mixed" programmes.
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** the programme selector knob stops on .

**Appliance in "Rinse Hold":**

- Press the "Rinse Hold" button again: the programme will terminate automatically with the selected spin cycle.
- If you do not wish to spin the clothes, press the "**On/Off**" button, turn the programme selector knob to the "Drain" programme and press the "**On/Off**" button again.

## PROGRAMME START

Turn on the tap and press the "**On/Off**" button. The indicator light of the "**On/Off**" button lights up.

**Note**: If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

## END OF WASH CYCLE

- The programme selector knob is in the Stop position.

1. Press the "**On/Off**" button to switch off the machine.
2. Cancel the options.
3. Turn the tap off.
4. Wait for the lid to unlock (about 1 minute).
5. Open the lid and the drum doors and unload the machine.

## CHANGE THE PROGRAMME DURING THE WASH CYCLE

1. Switch off the machine by pressing the "**On/Off**" button.
2. Select the new programme.
3. Start programme by pressing the "**On/Off**" button again.

## PAUSE/INTERRUPT A PROGRAMME

If, for any reason, you wish to interrupt the programme for a certain time and continue it later:

1. Press the "**On/Off**" button.
2. After the desired pause, press again the **"On/Off"** button.

## CANCEL PROGRAMME

1. Switch off the machine by pressing the "**On/Off**" button.
2. Set the programme selector to "Drain".
3. Press the "**On/Off**" button again to start the "Drain" programme.

Whirlpool is a registered trademark of Whirlpool USA